


**18J**  
**4051**

## Kia Sportage, Md. 2016

Side bar 60 with step and rubber dots

Flankenschutzrohr 60 mit Auftritt

Protections latérales 60 avec boutons apparence

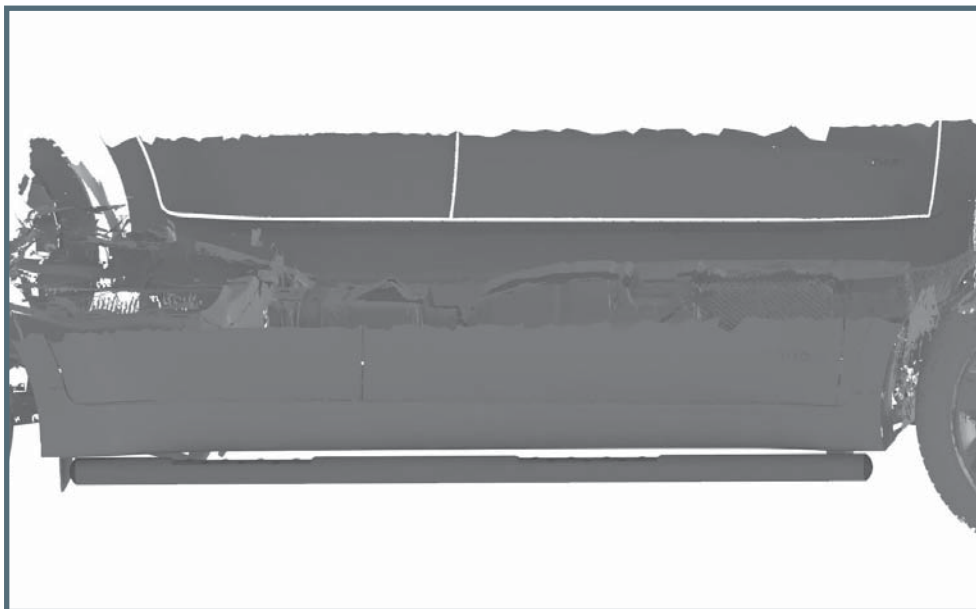

# ASSEMBLY INSTRUCTION

Montageanleitung • Instructions de montage





**45 Minuten**


**Artikel-Nr:**  
18J4051 Stainless Steel  
18J5051 Steel black

**Revision 1: 27.04.2016**



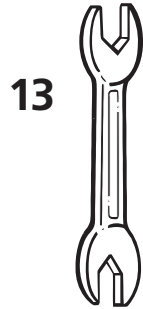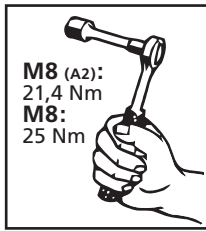


18J4051.1\_R / 18J5051.1\_R  
18J4051.2\_L / 18J5051.2\_L

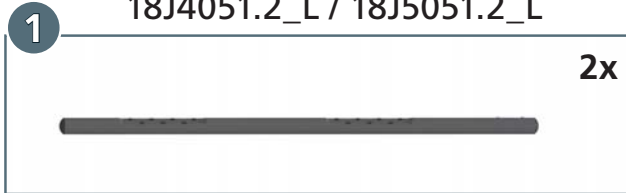


2 18J5047\_R / 18J5048\_L



3 18J5041\_R / 18J5042\_L

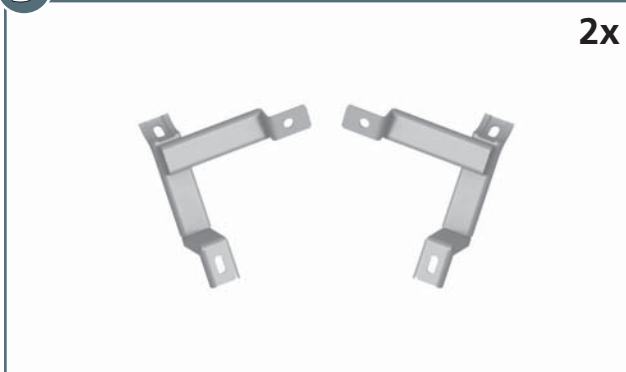

4 1455031

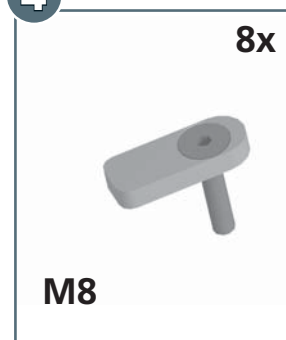

<b>a</b>		M8 x 20; DIN 933 A2	<b>6x</b>
<b>b</b>		M8; DIN 934 Zn	<b>8x</b>
<b>c</b>		Ø 8; DIN 127 A2	<b>6x</b>
<b>d</b>		Ø 8; DIN 127 Zn	<b>8x</b>
<b>e</b>		Ø 8,4; DIN 9021 A2	<b>6x</b>
<b>f</b>		Ø 8,4; DIN 9021 Zn	<b>8x</b>

